

The logo consists of the letters 'H' and 'R' in a stylized, blocky font. The 'H' is green, and the 'R' is dark grey. A small 'TM' trademark symbol is positioned to the upper right of the 'R'.

HRTM
FURY 2
User Manual

21+

Thank you for purchasing the Healthy Rips FURY 2. Read and follow the instructions carefully before your first use of the FURY 2. It is recommended that these instructions are put in a safe place for future reference.



Enjoy the quality and performance of your new FURY 2!

You must be at least 21 years old to purchase and use the FURY 2. This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses - without first consulting a doctor.

If you have any health issues, consult your doctor before using the FURY 2. Any illegal use of this device could subject the user to fines, penalties and/or imprisonment under the law of your jurisdiction. For aromatherapy use only.


THIS PRODUCT DOES NOT CONTAIN TOBACCO OR CONCENTRATE MATERIALS.

FURY 2 Overview:

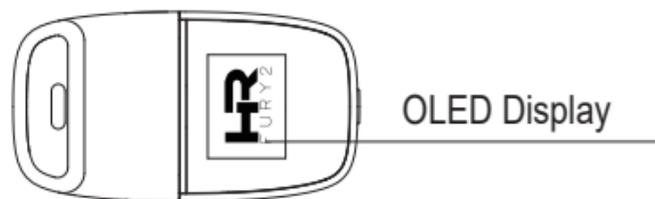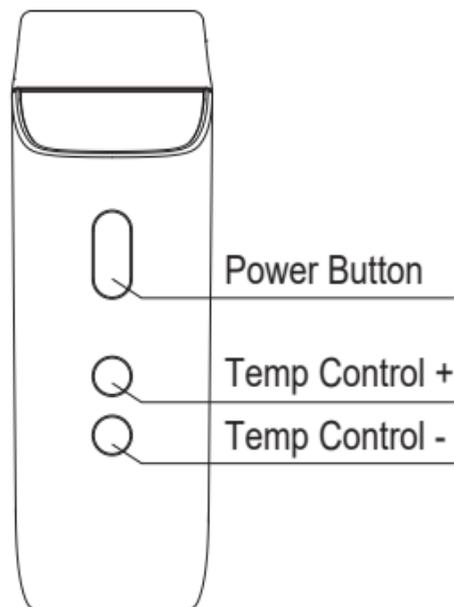

FURY 2 Start-Up:

1. Charge the unit for 2 hours before first use.
2. The battery will stop charging when the battery icon  is full.
3. Turn the unit on the maximum temperature for a complete 4 minute cycle to burn-off any manufacturing residue.
4. When the battery level is low - charge the unit with the included Micro USB Cord.
5. Do not use the unit while charging.
6. Do not charge overnight or unattended.

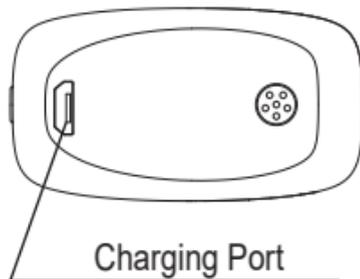

Important Features:

1. Rapidly click the Power Button 3 times within 2 seconds to power on or off.
2. Press and hold the Power Button for 3 seconds to enter 'Stealth Mode' (turn on/off the green/red indicator lights).
3. Press and hold the Power Button and the [-] button simultaneously for 2 seconds to change the display from Fahrenheit to Celsius or from Celsius to Fahrenheit.
4. Adjust the unit to your desired temperature by using [+] or [-] buttons.
5. Adjust the Auto Shut-Off Timer between 3-6 minutes: press and hold the Power Button and the [+] button simultaneously for 2 seconds to enter the timer 'Set' mode. Then change the timer by pressing the [+] or [-] buttons.
6. To check the Battery Level while the Unit is off: press the Power Button once.


Included in the Box:



Stainless Steel
Concentrate Pad



Silicone O-Ring
and Screen

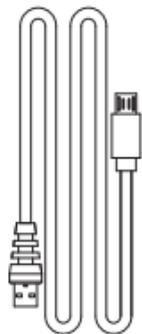

Micro USB
Cord




Dab Tool



Brush



Tweezers

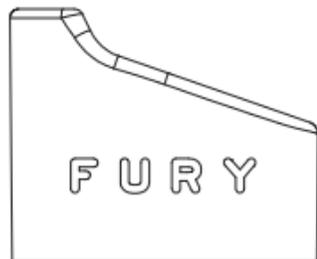

FURY 2 Cover


User Tips:

1. For best results, fill the chamber halfway or more and do not pack your material. Not packing allows the hot air (convection) to flow easily through your herbs for even heat distribution and extraction.
2. Turn off the unit when you are done by clicking the Power Button 3 times rapidly within 2 seconds. This will preserve your battery life and your herbs.

OLED Digital Screen Displays:



Turn On/Off



Low Battery



Charging



Error Occurred



Auto Shut Off
Count down



Temperature
Setting

Specifications:


Size	50 x 27.3 x 81mm
Battery Capacity	1600mAh Li-Polymer
Charging Voltage/Current	5V/1.5A
Turn On/Off	Press 3 Times Rapidly
Auto Shut-Off Timer	Adjustable Between 3-6 Minutes
Battery Low	Low Battery Symbol Will Display
Temperature Range	280°F - 430°F/138°C - 221°C
Charging Time	75 - 90 Minutes
Stealth Mode	Push Power Button For 3 Seconds

WARNING: Always store your FURY 2 in a dry place to protect it from the effects of weather.
KEEP OUT OF THE REACH OF CHILDREN AND/OR UNQUALIFIED PERSONS.

Using the FURY 2:

1. Load your dry herbs into the chamber and replace the lid.
2. Click the Power Button 3 times rapidly to turn on/off.
3. The OLED screen will display the Unit's current temperature.
4. The indicator light will be **RED** when heating and once your desired temperature is reached - it will turn **GREEN**.
5. The Unit will automatically shut off to preserve your battery and your herbs.
To adjust the Auto Shut-Off Timer see page 4.
6. To reactivate the Unit - click the Power Button 3 times rapidly.

KEY FEATURES:

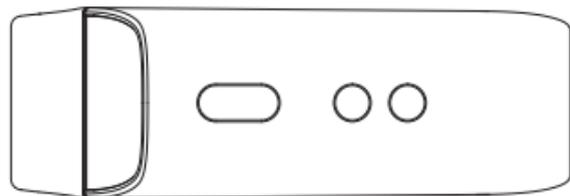

AIR HEATING



*HEATS UP IN
25 SECONDS*



*ADJUSTABLE
280°F-430°F*



MICRO USB




BATTERY LEVEL



*ADJUSTABLE
TIMER*

How to Load Dry Herbs:

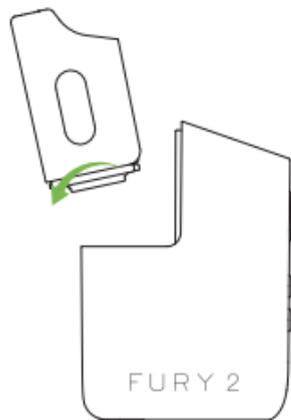

1. Push out the mouthpiece




2. Load herbs loosely



3. Replace the mouthpiece
& you are ready to vape

How to Load Concentrate:

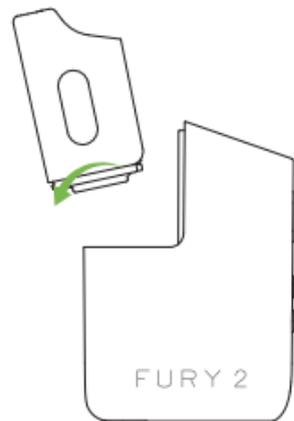


1. Remove the mouthpiece



2. Put stainless steel pad into the FURY 2




3. Load concentrate onto the stainless steel pad

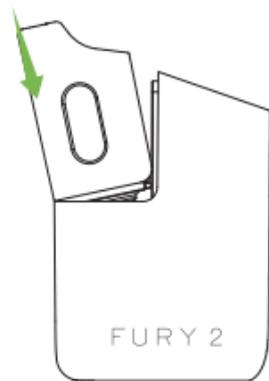

4. Replace the mouthpiece & you are ready to vape


How to Clean or Replace the Screen and O-Ring:

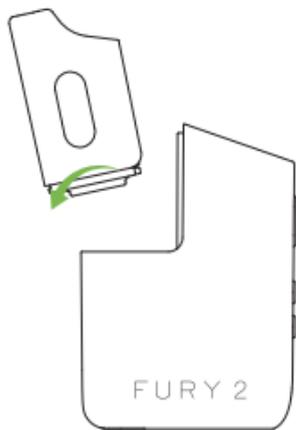

1. Remove the mouthpiece



2. Remove the O-ring & screen

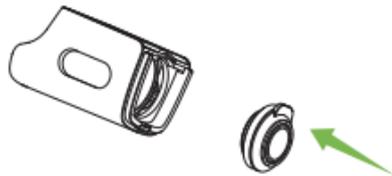


3. Replace the new or cleaned O-ring and screen



4. Put the O-ring and screen back onto the mouthpiece


How to Clean:

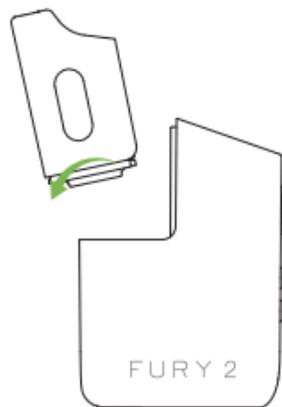

1. Remove the mouthpiece



2. Remove the material from the chamber

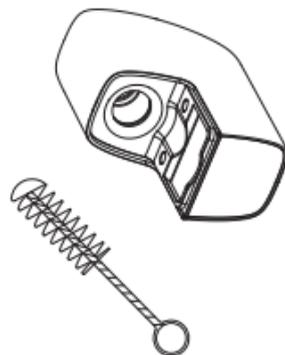

3. Use the cleaning brush to remove the remaining material from the chamber

Deep Cleaning - Recommended Every Week:

1. Remove the mouthpiece.
2. Empty the chamber.
3. Remove the silicone O-ring & screen from the mouthpiece.
4. Remove the O-ring from the screen and brush them using ISO alcohol - then rinse with water.
5. Dampen a Q-tip with ISO alcohol and swipe out the chamber & glass mouthpiece.
Do Not drip any liquids into the chamber.
6. Press the screen & O-ring back onto the mouthpiece.
7. Put the mouthpiece back onto the unit and turn it on for 2 minutes to "burn off" any cleaning residue.

HRTM
FURY 2

