



User Manual



18+


Thank you for purchasing the Healthy Rips FURY for dry herb, oil & wax. Read and follow the instructions carefully before your first use of the FURY vaporizer. It is recommended that these instructions are put in a safe place for future reference. Enjoy the quality and performance of your new FURY!

You must be at least 18 years old to purchase and use the FURY. This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses - without first consulting a doctor.

If you have any health issues, consult your doctor before using the FURY. Any illegal use of this device could subject the user to fines, penalties and/or imprisonment under the law of your jurisdiction. For aromatherapy use only.

THIS PRODUCT DOES NOT CONTAIN TOBACCO OR CONCENTRATE MATERIALS.


FURY Overview:

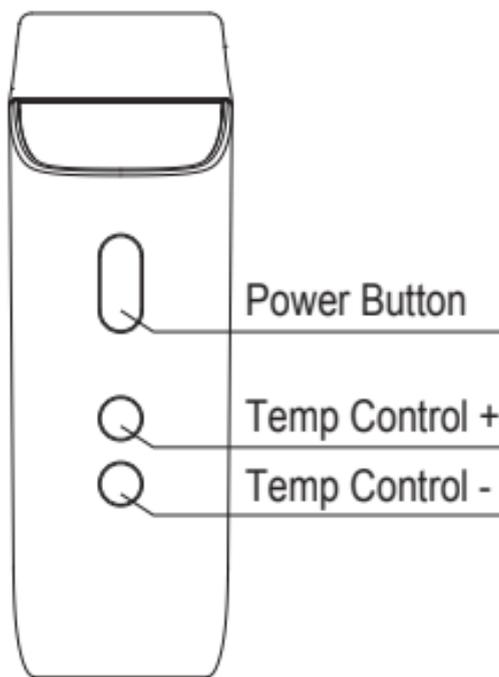

Included in the Box:



Silicone O-Ring
and Screen

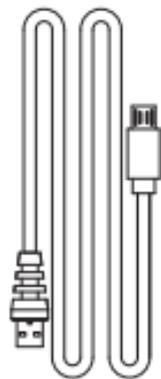

USB Cable
& Wall Charger



Dab Tool



Brush



Tweezers



Quartz Tank


User Tips:

1. For best results, fill the chamber halfway or more and do not pack your material. Not packing allows the hot air (convection) to pass easily through your herbs for even heat distribution.
2. Turn off the unit when you are done by clicking the Power Button 5 times rapidly within 2 seconds. This will preserve your battery life and your herbs.

OLED Digital Screen Displays:



Turn On/Off

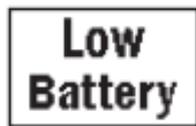

Low Battery



Charging



Error Occurred



Auto Shut Off
Count-down



Temperature
Setting

Specifications:

Size	50*27.3*81mm
Battery Capacity	1600mAh Li-Polymer
Charging Voltage/Current	5V/1A
Lock/Unlock	Press 5 Times Rapidly
Safety Power Duration	4 Minutes
Battery Low	Low Battery Symbol Will Display
Temperature Range	320°F-430°F
Charging Time	75 - 90 Minutes


WARNING: Always store your FURY in a dry place to protect it from the effects of weather.

KEEP OUT OF THE REACH OF CHILDREN AND/OR UNQUALIFIED PERSONS.

Using the FURY:

1. Load your dry herbs into the chamber and replace the lid.
2. Click the power button 5 times rapidly.
3. The OLED screen will display the FURY's current temperature.
4. The indicator light will be **RED** when heating and once your desired temperature is reached - it will turn **GREEN**. The FURY will automatically shut off after 4 minutes to preserve your battery and your material.
5. To reactivate the FURY - click the power button 5 times rapidly.

KEY FEATURES:

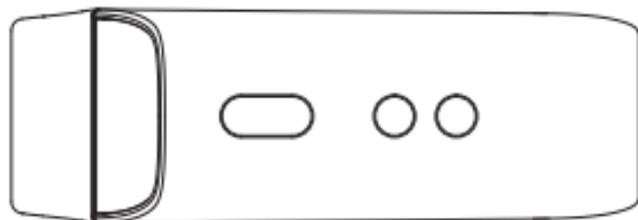

AIR HEATING



<30" HEATING UP



*ADJUSTABLE
320°F-430°F*



*MICRO USB
CHARGING*



BATTERY LEVEL




COMPACT SIZE

How to Load Dry Herbs:



1. Push out the mouthpiece

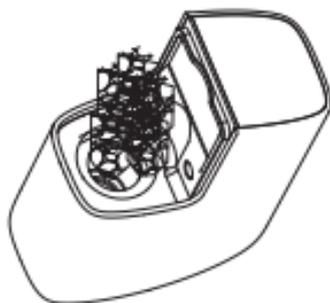


2. Load herbs loosely




3. Replace the mouthpiece
& you are ready to vape


How to Clean:

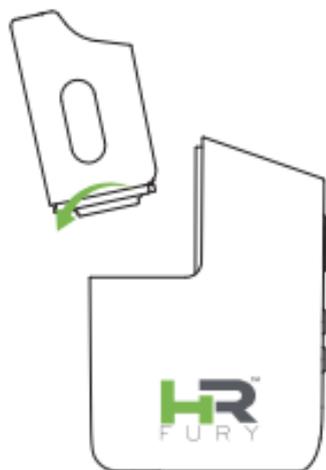

1. Remove the mouthpiece

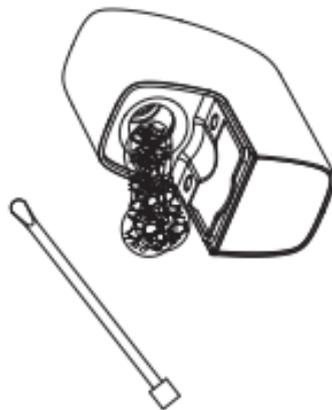

2. Remove the material from the chamber

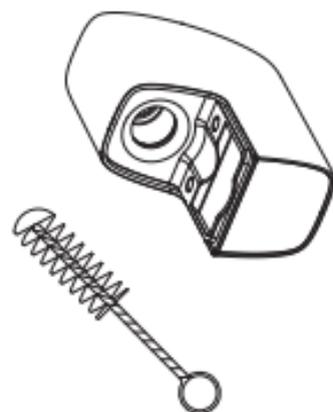


3. Use the cleaning brush to remove the remaining material from the chamber

How to Load Oil & Wax:

- 1. Remove the mouthpiece
- 2. Pull out the silicone cap from quartz cup
- 3. Load Wax/Oil
- 4. Replace the Silicone cap
- 5. Put quartz cup into the FURY
- 6. Replace the mouthpiece & you are ready to vape

How to Replace the Screen and O-Ring:

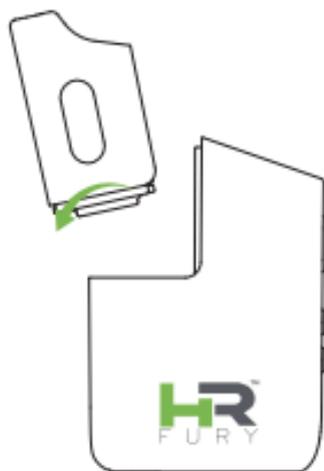

1. Remove the mouthpiece



2. Remove the O-Ring & Screen




3. Replace the new or cleaned O-Ring and Screen



4. Put the O-Ring and Screen back onto the mouthpiece

Charging Instructions:

1. Charge the FURY for 2 hours before first use.
The battery will stop charging when the icon  is full.
2. When the battery level is low - charge the FURY with the included Micro USB cord and Wall Charger.
3. Do not use the FURY while charging.

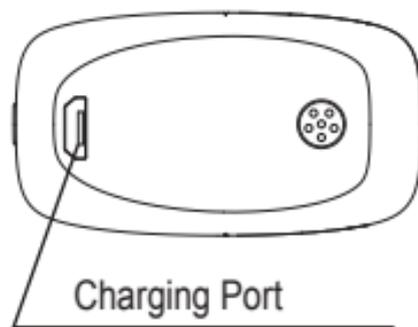

Important User Tips:

1. Rapidly click the Power Button 5 times within 2 seconds to power on or off.
2. Press and hold the Power Button and the [-] Button simultaneously for 2 seconds to change the display from Fahrenheit to Celsius or from Celsius to Fahrenheit.
3. Adjust the FURY to your desired temperature by using [+] or [-] buttons.
4. The FURY has a 4 minute auto shut-off time to preserve your battery and material.

HRTM
F U R Y

